



Innovation  
*With a Human Touch*

4F-1, 236, Fu-Te 2<sup>nd</sup> Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

# Power Supply Changing Process


# Spirit

Version: 1.0  
May 20, 2014


Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release

1. Dismount 3 screws on the back panel (see red arrows below)

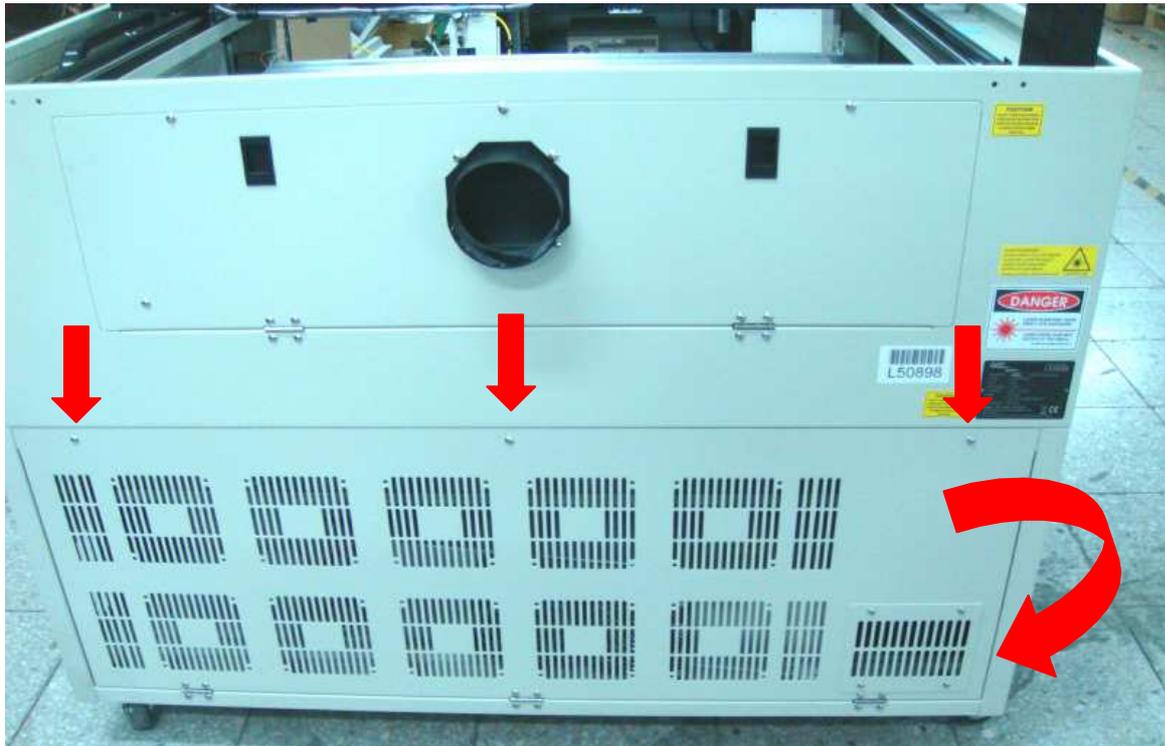

- 2. Loosen the screws and remove the 2 power supply AC side cable (blue circle below)
- 3. Remove the DC side 2 cables (red circle below)
- 4. Dismount 6 screws on the power supply panel (see red arrows below)

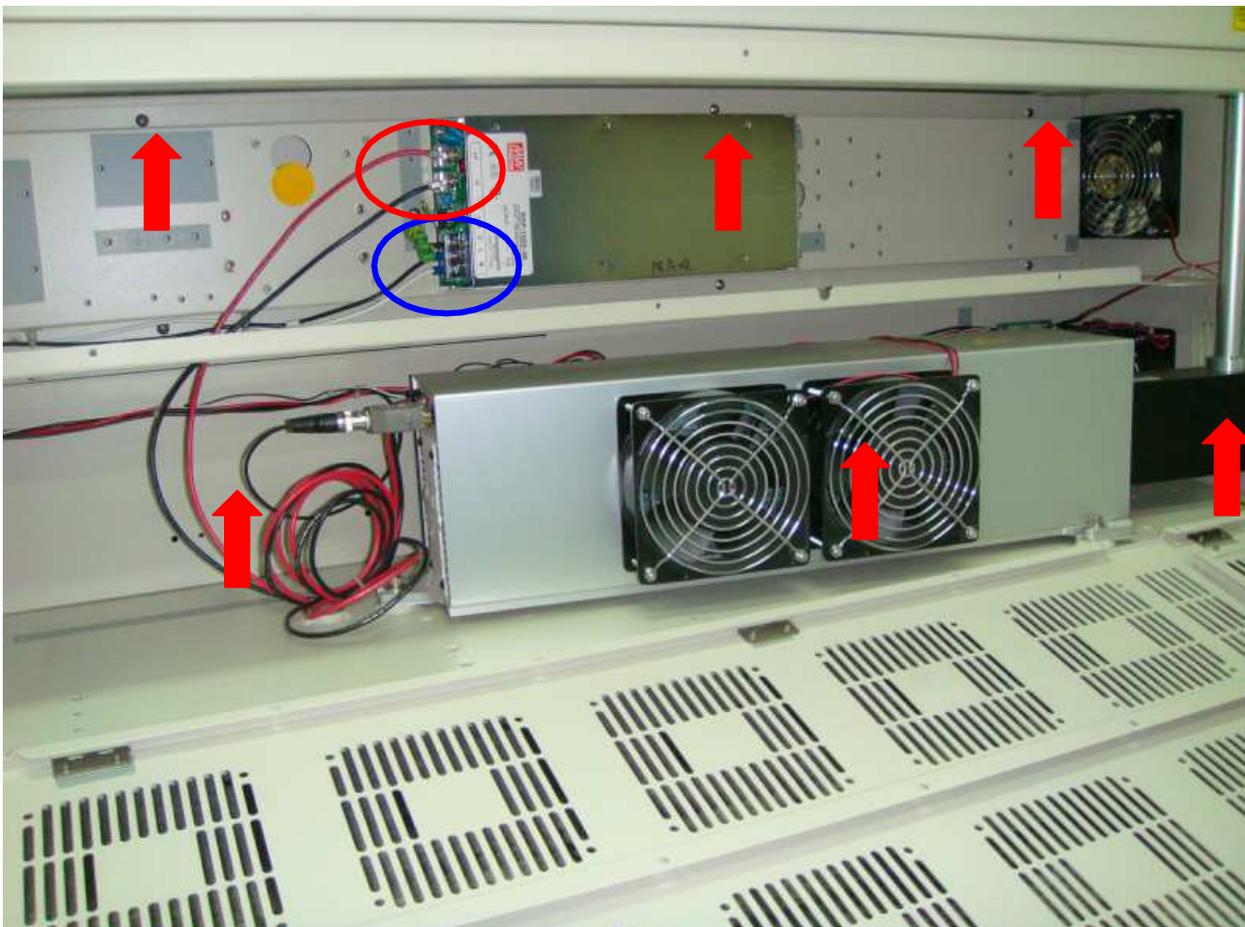

5. Dismount 3 screws on the power supply panel (see red circle below). The power supply can be changed to new one.

